

IARMOR EDGE™

PART#: IA-N198


BEFORE INSTALLATION

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. THANK YOU FOR CHOOSING OUR PRODUCT!

Torque Value

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

PART LIST

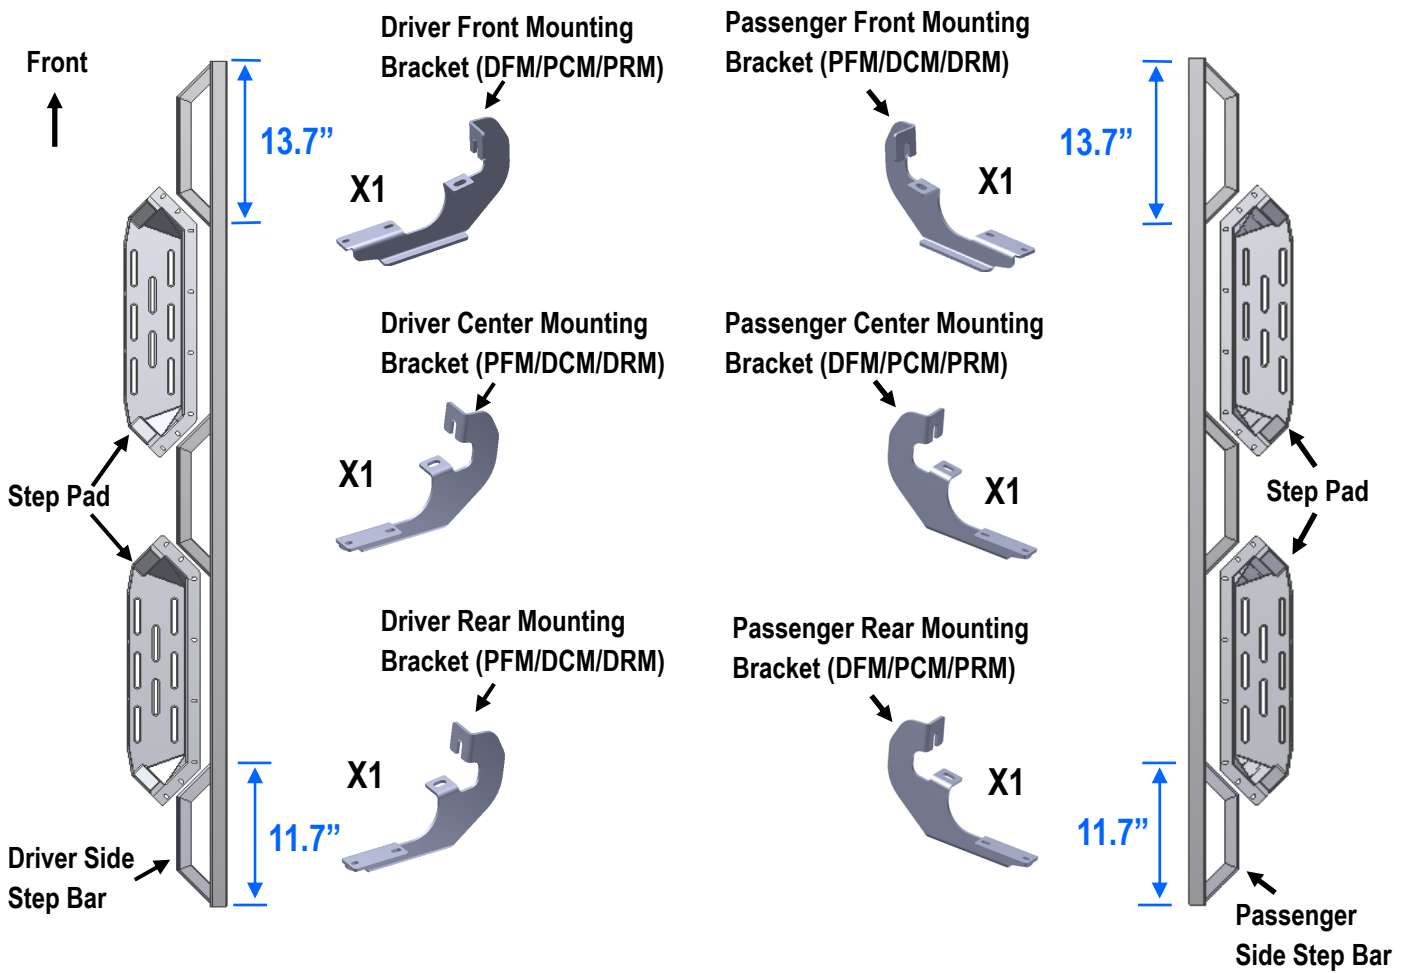

Customer Support: info@iarmorauto.com

iArmor®




X12
M8X1.25-30mm
Hex Bolt



X12
M8 Flat Washer



X12
M8 Lock Washer



X12
M8 Clip Nut



X44
M6X1-20mm
T- Bolt



X44
M6 Large Flat
Washer



X44
M6X1 Nylon Lock
Nut




X8
M6X1-20mm Flat
Sunk Head Bolt


The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation.

STEP 1

Install the Step Pads onto the step bars with (32) M6X1-20mm T-Bolts, (32) M6 Large Flat Washers, (32) M6X1Nylon Lock Nuts and (8) M6X1-20mm Flat Sunk Head Bolts.

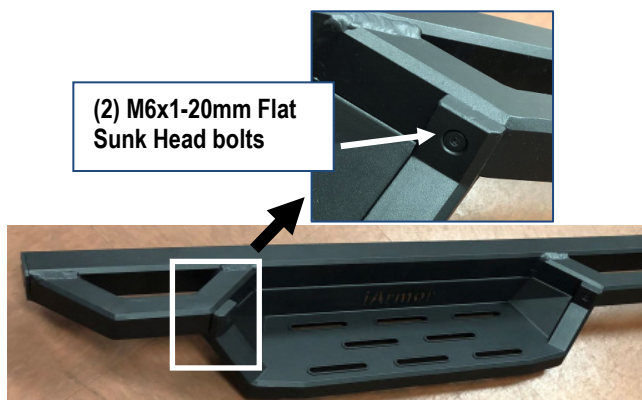


(8) M6x1-20mm T-Bolts
(8) M6 Large Flat Washers
(8) M6X1 Nylon Lock Nuts

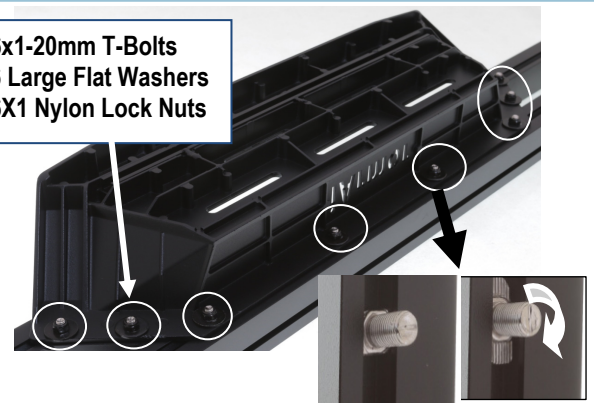

STEP 2

Start the installation from passenger side of the vehicle. Locate the passenger mounting locations along the bottom and inner side of the body panel, (Fig1). **NOTE:** It may help to hold a Bracket up in place to help determine the mounting holes to use along the bottom and inner side of the body.

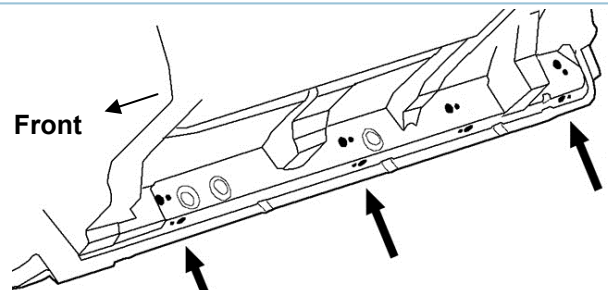


(Fig 1) Passenger side mounting locations along bottom back of body panel illustrated

Customer Support: info@iarmorauto.com


iArmor®

STEP 3

Remove rubber plugs from the front location, (Fig 2). Select (2) M8 Clip Nuts. Slide each Clip Nut into the large hole and over the smaller hole next to it. Line up threaded nut on the Clip Nut with smaller hole in body panel, (Fig 3).

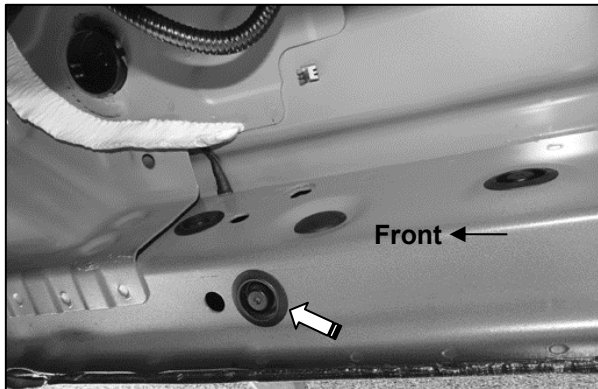


(Fig 2) Remove rubber plugs from Passenger Side Front Mounting Location

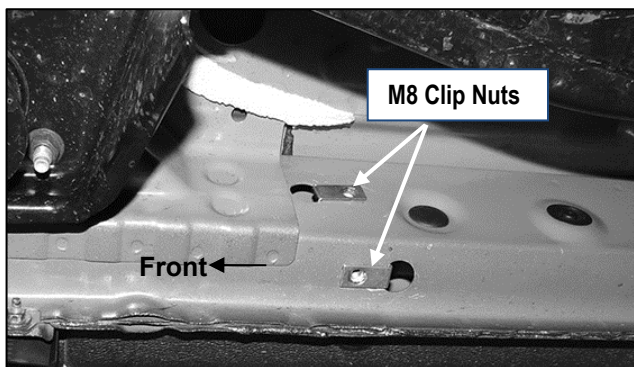


(Fig 3) Slide M8 Clip Nut into large hole and over small hole

STEP 4

Select (1) Passenger Front Mounting Bracket. Attach the Bracket to the (2) M8 Clip Nuts with (2) M8X1.25-30mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Flat Washers, (Fig 4 & 5). Snug but do not fully tighten the hardware.

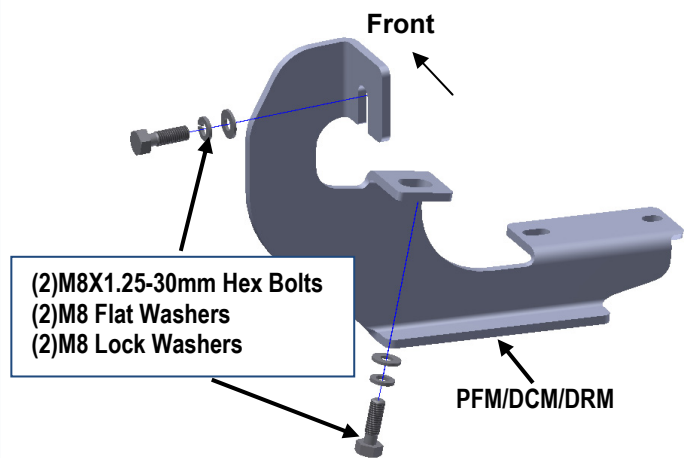

(Fig 4) Passenger Front Mounting Bracket Installed

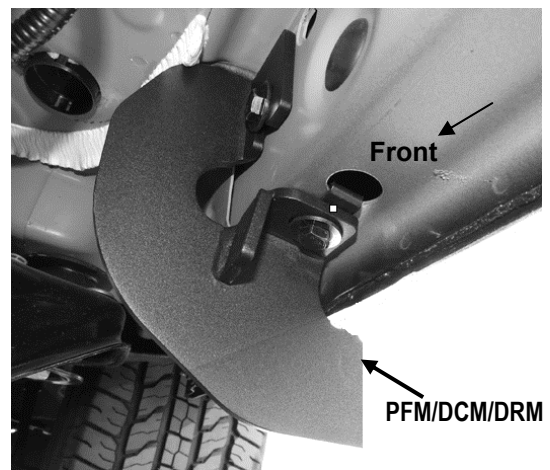


(Fig 5) Passenger Front Mounting Bracket Installed


iArmor®

STEP 5

Move to Passenger Side Center Mounting location along the body, (Fig 6). Repeat **Steps 2—4** to install (1) Passenger Center Mounting Bracket (DFM/PCM/PRM), (Fig 7). Do not tighten hardware at this time.

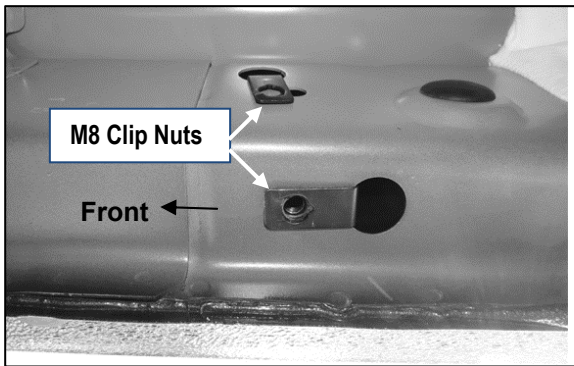


(Fig 6) Passenger Side Center Mounting Location

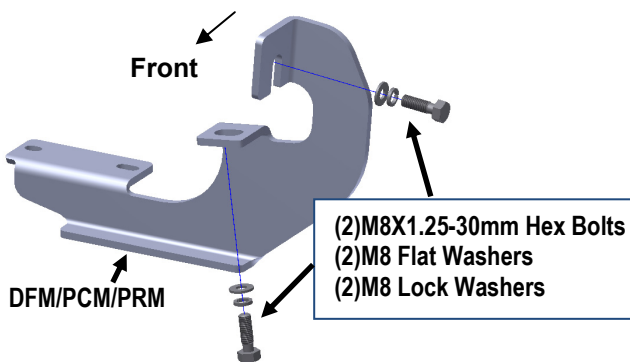


(Fig 7) Passenger Center Mounting Bracket Installed

STEP 6

Move to Passenger Side Rear Mounting location along the body, (Fig 8). Repeat **Steps 2—4** to install (1) Passenger Rear Mounting Bracket (DFM/PCM/PRM), (Fig 9). Do not tighten hardware at this time.

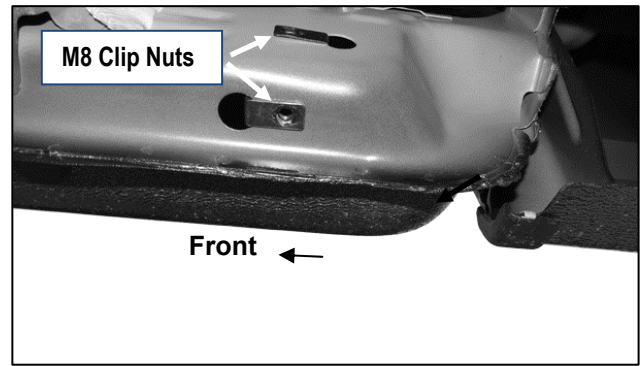

(Fig 8) Passenger Side Rear Mounting Location

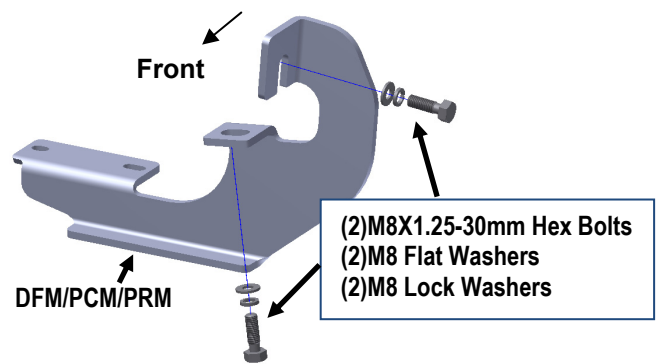


(Fig 9) Passenger Rear Mounting Bracket Installed

iArmor®

STEP 7

Once all (3) Brackets have been installed, attach the Assembled Passenger Side Step Bar to the Mounting Brackets with (6) M6X1-20mm T-Bolts, (6) M6 Large Flat Washers & (6) M6X1 Nylon Lock Nuts (**Fig 10**). Do not tighten hardware at this time.

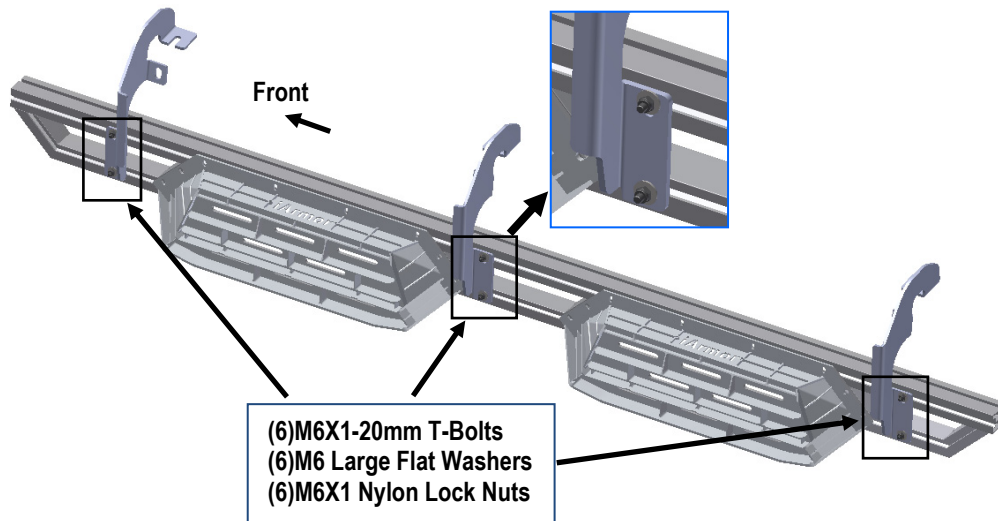

(Fig 10) Assembled Passenger Side step Bar Installed

STEP 8

Properly level and adjust the Step Bar and fully tighten all hardware.

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.

STEP 9

Move to the driver side of the vehicle. Repeat **Steps 2-8** to install driver side step bar.

Customer Support: info@iarmorauto.com